

GRAND
VIDEOKÉ
HD

Quick Guide


TKR-373MP

HOW TO INSTALL / 2-4
CHANNEL SETTINGS / 5-6
BASIC FUNCTIONS / 6-7
SECONDARY FUNCTIONS / 7-8
HOW TO USE GV SMART APP / 8-9


HOW TO INSTALL |02

MAIN UNIT – HDTV CONNECTION

1. Please connect the main unit to the HDTV using an HD Output cable as shown in the image below.

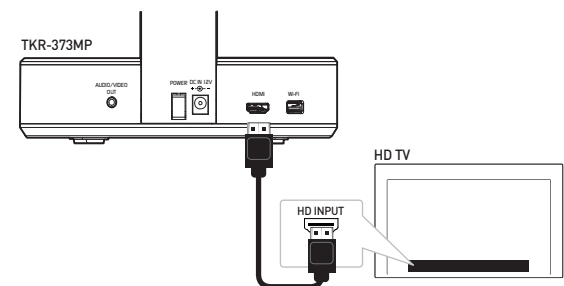


2. If a speaker system is available:
Please connect the audio output of the main unit to the audio input of the speaker system as shown in the image below.

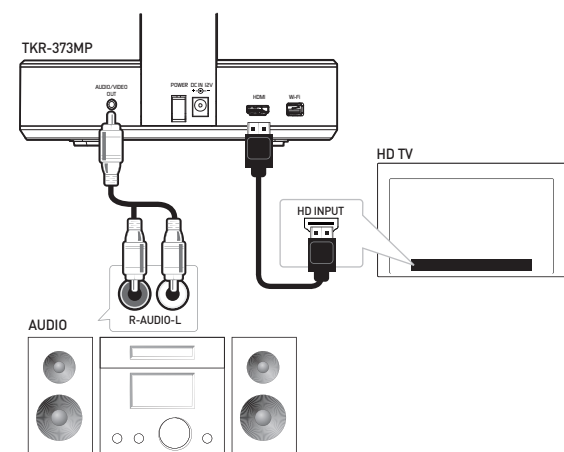


HOW TO INSTALL |03

MAIN UNIT – STANDARD TV CONNECTION

1. Please connect the main unit to the TV using an RCA cable as shown in the image below.

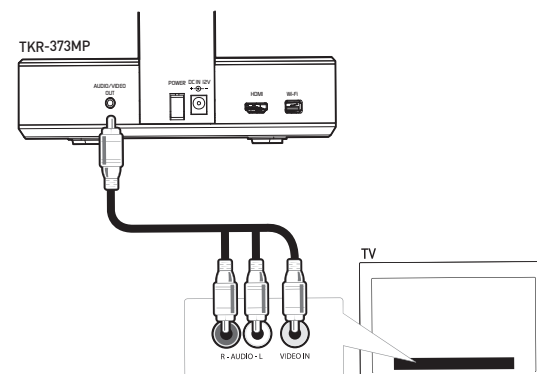


2. If a speaker system is available:
Please connect the audio output of the main unit to the audio input of the speaker system as shown in the image below.

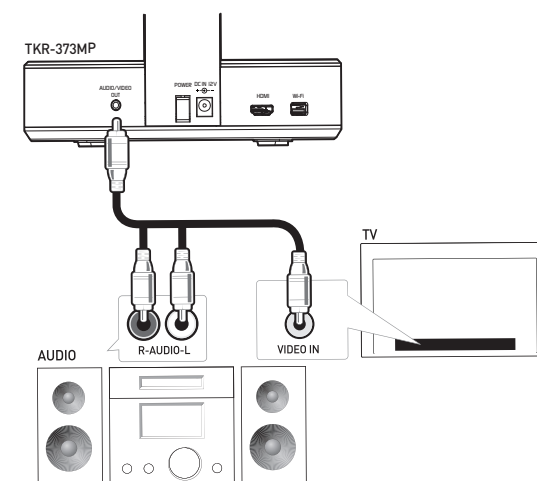


HOW TO INSTALL |04

POWER ON/OFF


1. Plug the power cable into the outlet.

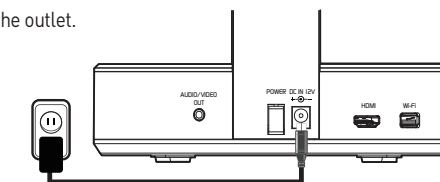

2. Switch on the main unit.

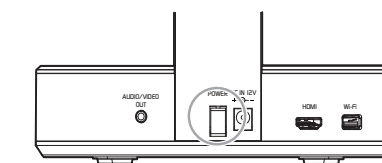

3. Check if the POWER LED (BLUE) on the main unit is on.

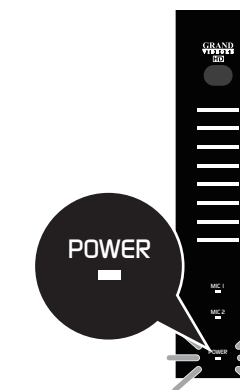

TV SET-UP

1. The default TV system is NTSC.
2. If you are using a PAL TV, please follow the instructions below.
[MENU] → "Config" → "TV Setup" → Select "PAL".

WIRELESS MICROPHONE CONNECTION


1. The wireless microphones are set in the default channel.
2. The wireless microphones can be turned on and used immediately after turning on the main unit.
3. The wireless microphones will automatically turn off when not in use for 10 minutes.
4. When you are experiencing noise due to interference, please change the channel of the microphone (see Channel Setting).

CHANNEL SETTINGS |05


TKR-373MP has sixteen(16) available channels. [MIC1 Ch 1~Ch 8, MIC2 Ch 1~Ch 8]
Please take note that microphones and main player should be on the same channel.
In case of channel interference (either one or two of the microphones cannot be detected by the main player), please follow the step by step instructions below for re-channeling.

[STEP 1] Change the channel on the main unit by using the remote control.

1. Turn on the main unit. Make sure no song is playing.
2. Go to channel select menu:
Press [MENU] button + choose "Config" → "System" → "MIC Channel Setup" + [SEL] button.

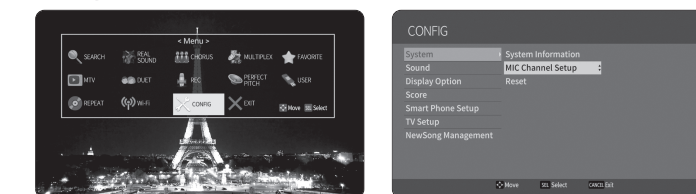

3. Select one channel number from 1 to 8 and press that specific number on the remote.
4. Press [S] button.
5. Press [Power off] → [Power on] to save.

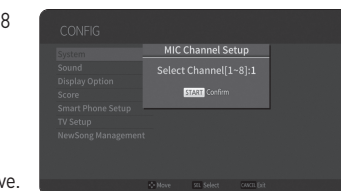

[STEP 2] Set the channel of the two microphones using the microphone's keypad.


For the first(1st) microphone:





- 1) Turn on the microphone by pressing the [POWER] button.
- 2) Press [C] → [VOL] → [MENU] → [RES] button in order.
The microphone LED will be turned on and off twice.
- 3) Press the same channel number that you set in the main player.
The microphone LED will be turned on and off twice.
- 4) Press [VOL] button. →
Microphone LED will be turned on and off twice.
- 5) Press [MENU] button to save. →
Microphone LED will be turned on and off 6 times.

CHANNEL SETTINGS |06


[STEP 2] Set the channel of the two microphones using the microphone's keypad.(Continued)


For the second (2nd) microphone:

1) Turn on the microphone by pressing the  button.

2) Press  →  →  →  button in order.
Microphone LED will be turned on and off twice.

3) On the alphanumeric keypad, press the same channel number that you have set in the main player. The microphone LED will be turned on and off twice.


4) Press  button. →
Microphone LED will be turned on and off twice.




5) Press  button to save. →
Microphone LED will be turned on and off 6 times.

- Check if both microphones are now working.
If not, try again. Contact our Customer Service for other concerns.


BASIC FUNCTIONS

SONG SELECTION & PLAYBACK

METHOD 1. By entering song number directly.
- Key in the song number using the alphanumeric keypad, then press .

METHOD 2. By searching the song.
(1) To Open the Song List : Press .
(2) Input the Title or Artist by typing on the alphanumeric keypad.
(3) To Sort by Title, Artist : Press .
(4) To Select : Press the Arrow keys, then press .


STOP

To stop a song while playing, press .


PAUSE

1. To pause a song while playing, press .
2. To continue, press .

RESERVATION

Select a song, then press .

CANCEL THE RESERVED SONG





Press Reserved song number, then press .

BASIC FUNCTIONS |07

VOLUME(MUSIC, MIC, ECHO)

1. Volume : Press .
2. Type selection(MUSIC, MIC, ECHO) : .
3. Adjustment :  , .




KEY, TEMPO, MELODY, BGV, VOCAL

1. Adjustment : Press .
2. Type selection(KEY, TEMPO, MELODY, BGV, VOCAL) : . * VOCAL : Multiplex Only.
3. Adjustment :  , .

SECONDARY FUNCTIONS




SKIP

METHOD 1. Prelude/Interlude skip. Press  (While playing), .

METHOD 2. Rewind a tune, Forward a tune. Press  (While playing),  , .

METHOD 3. Verse skip. Press  (While playing), .

FAVORITE SONGS


1. To Add: Select a song, press .
2. To Remove: Select a song that has been added, press .
3. To Search: Press , then select "FAVORITE".

RECORDING


You can record a song in 5 ways :

METHOD 1. , Select "REC", Select "Recording Song", Select a song, press .

METHOD 2. , Select "Recording Song", Select a song, press .

METHOD 3. Open the Song List, Select a song, press .

METHOD 4. While playing music, press  : Record the playing song.

METHOD 5. Key in the song number using the alphanumeric keypad, then press .

SECONDARY FUNCTIONS |08

SEARCHING RECORDED SONGS

You can record a song in 2 ways :


METHOD 1. , Select "REC", Select "Listen/Download".

METHOD 2. , Select "Listen/Download".

SONG REPEAT

Press , Select "REPEAT".

PERFECT PITCH FUNCTION

METHOD 1. Press .

METHOD 2. Press , Select "PERFECT PITCH".

HOW TO USE GV SMART APP

HOW TO INSTALL APP

1. Start QR code reader on your smartphone or tablet.
2. Select one of the following QR codes applicable to your smartphone or tablet.



Android Device



iPhone



iPad

3. You will be redirected to either the Google Play Store or the Apple App Store depending on your smartphone or tablet.
Install the app from there.

HOW TO CONNECT YOUR SMARTPHONE/TABLET WITH THE GRAND VIDEOKE

METHOD 1. (HOT SPOT, only one smartphone or tablet can be connected.)

Run GV Smart APP on your smartphone or tablet. →
Select "PAIRING KARAOKE MACHINE" Turn on the main unit and select [MENU]. →
"Wi-Fi" using the remote control.

Or, select the [Wi-Fi] with remote control.(If you reconnect to a previously connected smartphone or tablet a popup will appear. Press [START] to connect automatically.)




1) Using the QR CODE reader on the smartphone or tablet, scan the QR CODE displayed on the main unit screen.
2) Select the same AP as the connection information displayed on your smartphone or tablet.
3) Connection complete. (If connection fails, please retry.)


HOW TO USE GV SMART APP |09

HOW TO CONNECT YOUR SMARTPHONE/TABLET WITH THE GRAND VIDEOKE

METHOD 2. (AP method – A Wi-Fi router must be present. Up to 4 smartphones or tablets can be connected.)

Press , Select "CONFIG". →

"Smart Phone Setup", move to "AP" with  ,  direction key, and press .

1) Move to preferred access point (AP) with [Up / Down] direction key in list displayed in popup window, and press .

2) Use the  ,  ,  ,  direction keys to input the WiFi Password.

*Numbers can be input directly by the number buttons on the microphone or remote control.

3) Press  → Display "Connected" to the AP. Press  to process.

4) If "AP" is selected on setting configuration, the smartphones or tablets that would be connected to the Grand Videoke should be on the same AP as the Grand Videoke.

GV SMART APP FEATURES

DIRECT SONG DOWNLOAD (SONG UPDATE)

Select the new song volume you want to purchase. →
Download and transfer it to the main unit.

SONG SEARCH

Easy typing and searching of song titles and artists.

REMOTE

Use all the functions of the remote control more conveniently on your smartphone.

SONG BOOK/TYPE

View various song lists including new song downloads.

FAVORITE SONGS

If you click  , you can easily register your favorite songs and easily find them.

RECORD

- Record : The recorded songs on the main unit can be displayed and can be sent or deleted on your smartphone or tablet.
- Print Screen : "Perfect Pitch" score screens can be managed and be sent on your smartphone or tablet for sharing on social media.

FUN

- TRANSFER MP3 : Transfer the MP3 files stored in your smartphone or tablet to the main unit for listening and singing.
- TRANSFER IMAGE : Transfer photos stored in your smartphone or tablet to the main unit and use it as background.
- MESSAGE SIGN : Write and send messages that you would like to display live on screen.